

ZAZU

Gaia the galaxy star

GALAXY PROJECTOR

WITH SOUNDMACHINE AND CRY SENSOR



SELECT YOUR LANGUAGE



MANUAL



HANDLEIDING



GUIDE
D'UTILISATION



BEDIENUNGS
ANLEITUNG



ANVÄNDAR
MANUAL



BRUKERMANUAL



OHJEKIRJA



BRUGERMANUAL



INSTRUKCJA
OBSŁUGI



MANUAL
DE USUARIO



UŽIVATELSKÝ
MANUÁL



POUŽÍVATEĽSKÁ
PRÍRUČKA



KORISNIČKI
PRIRUČNIK



A NAVODILA
ZA UPORABO



ΕΓΧΕΙΡΙΔΙΟ
ΧΡΗΣΤΗ



HASZNÁLATI
UTASÍTÁS



ПОСІБНИК
КОРИСТУВАЧА



ITALA MANUALE
UTENTE IAN



MANUAL




JUHENDV




ROKASGRĀMATA



MANUAL



УПЪТВАНЕ ЗА
УПОТРЕБА




ИНСТРУКЦИЯ

MANUAL

GALAXY PROJECTOR



EN

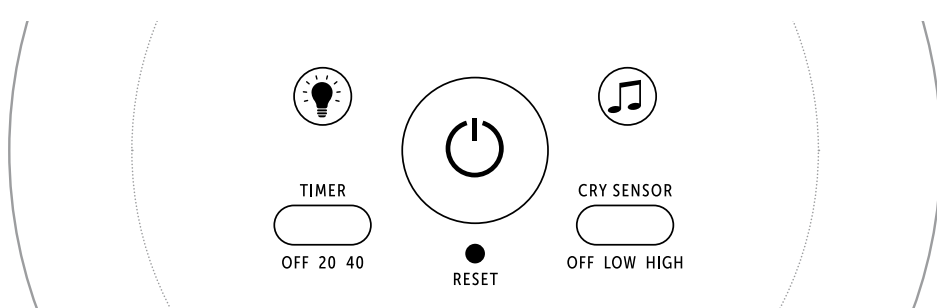

ON/OFF button

The big round button is the on/off button and has several functions:

ON

Shortly press the button to switch on light and once more to play music as well. Timer and cry sensor will only become active when the slider is not in the off position.

OFF *both sound, light and cry sensor*

Press and hold the button. Light, sound and cry sensor will be shut off.

Change settings

Light

Colour

Shortly press the small button to scroll through all colours.

Brightness

Press and hold to select your preferred brightness: high-medium-low.

Timer

Put the slider in the preferred setting

- OFF: no timer (continuous on)
- 20 minute auto shut-off
- 40 minute auto shut-off

Sound

Melodies

Shortly press the small button to scroll through all melodies: heartbeat, white noise, shushing, lounge, ocean, African sunset, breathing and 3 lullabies.

Volume

Press and hold to select your preferred volume high-medium-low.

Cry sensor

- The cry sensor will activate the last used setting.
- The cry sensor has sensitivity settings:
Low = activates upon loud crying volume
High = activates upon medium/soft crying volume

Reset: If the product is not working properly, press the reset button with a small pin to restart the software.

Power supply

- Ensure the rechargeable battery is fully charged before initial use.
- When battery indicator is blinking, the battery is running low, time to charge it.
- While charging, the indicator light is red. It will switch off once the battery is fully charged, this takes about 2-2.5 hours.
- When finished charging, take out the charger plug.
- Use only the supplied cable to charge the product and insert it into a USB power supply with the following symbols.

Battery life

The battery life varies based on the brightness and volume, but on average it should last at least 9 hours.

⚠ WARNING! SAFETY GUIDELINES


- IMPORTANT! Keep for future reference.
- This ZAZU product is fully compliant with the EU, CA, AU, NZ and USA legislation.
- Please keep the packaging away from small children.
- Never allow your child to play with the power cord.
- Rechargeable battery can only be charged under adult supervision.
- This toy contains batteries that are non-replaceable.
- The connecting lead is low voltage only, but for reliability reasons it should be treated with care.
- For use only with the USB-cable that came with the ZAZU-product.
- The USB cable is not a toy.
- Long cable strangulation hazard.
- Do not place too close to the baby.
- This light does not get warm.
- This product is intended for indoor use and is not water resistant. Please keep dry.
- The plush can be washed by hand and air dried, but remove the module beforehand.
- For cleaning the module do not immerse in water, but wipe with a damp cloth.
- Do not try to disassemble the product if it stops working. Please contact customer service.
- The EC Declaration of Conformity can be requested from the below address: info@zazu-kids.com

HASZNÁLATI ÚTMUTATÓ

GALAXY KIVETÍTŐ



HU

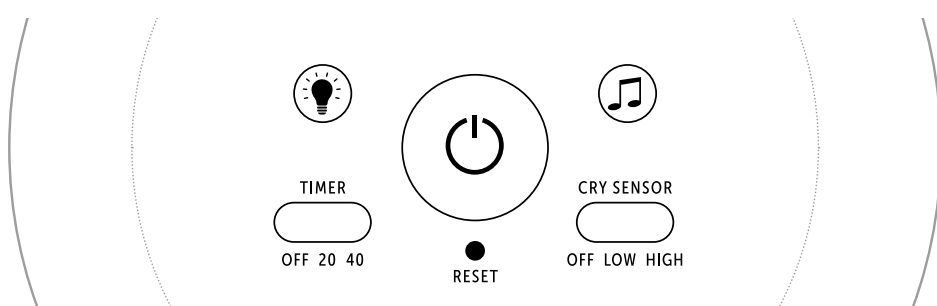

BE/KI gomb

A nagy kerek gomb a be- és kikapcsoló gomb, amely az alábbi funkciókkal rendelkezik:

BEKAPCSOLÁS

Röviden nyomja meg a gombot a fény bekapcsolásához, majd nyomja meg még egyszer a zene lejátszásához is.

Az időzítő és a sírásérzékelő csak akkor kapcsol be, ha a csúszka nincs kikapcsolt helyzetben.

KIKAPCSOLÁS (hang, fény és sírásérzékelő)

Nyomja meg és tartsa lenyomva a gombot. A fény, a hang és a sírásérzékelő kikapcsol.

Beállítások módosítása

Fény

Szín

Röviden nyomja meg a kis gombot az összes szín végiglapozásához.

Fényerősség

Tartsd nyomva a gombot a kívánt fényerősség kiválasztásához: halvány – közepes – erős.

Időzítő

Állítsd a csúszkát a kívánt helyzetbe:

- KI: nincs időzítés (folyamatosan bekapcsolva)
- automatikus kikapcsolás 20 perc után
- automatikus kikapcsolás 40 perc után

Hang

Dallamok

Nyomd meg röviden a kis gombot a dallam kiválasztásához: szívdobogás, fehér zaj, csss hang, nyugtató hangok, óceán, afrikai naplemente, légzés, 3 altatódal.

Hangerő

Tartsd nyomva a gombot a kívánt hangerő kiválasztásához: magas – közepes – alacsony.

Sírásérzékelő

- A sírásérzékelő mindig az utolsó beállítás szerint működik.
- A sírásérzékelő érzékenységet te állítod be:
 - Alacsony = hangos sírásra kapcsol be
 - Magas = közepes/halk sírásra kapcsol be

Visszaállítás: Ha a termék nem működik megfelelően, egy kis tüvel nyomja meg a reset gombot a szoftver újraindításához.

Tápegység

- Az első használat előtt töltsd fel teljesen az újratölthető akkumulátort!
- Ha az akkumulátor jelzőfénye villog, az akkumulátor lemerülőben van, ideje feltölteni.
- Töltés közben a jelzőfény pirosan világít. Az akkumulátor teljes feltöltése után a piros fény kikapcsol, ez körülbelül 2-2,5 órát vesz igénybe.
- A töltés befejeztével húzd ki a töltő csatlakozóját!
- Csak a mellékelt kábelt használd a termék töltéséhez, és a következő szimbólumokkal ellátott USB tápegységhez csatlakoztasd:

Az akkumulátor élettartama

Az akkumulátor élettartama a fényerőtől és a hangerőtől függően változik, de átlagosan legalább 9 órát kell bírnia.

⚠ FIGYELMEZTETÉS! BIZTONSÁGI IRÁNYELVEK

- FONTOS! Őrizd meg későbbi használatra!
- Ez a ZAZU termék teljes mértékben megfelel az alábbi közösségek és államok jogszabályi előírásainak: EU, CA, AU, NZ, CN és USA.
- A csomagolást tartsa gyermekektől távol!
- Soha ne engedd játszani a gyermekedet a tápkábelrel!
- Az újratölthető akkumulátort csak felnőtt felügyelete mellett szabad tölteni.
- Ez a játék nem cserélhető elemeket tartalmaz.
- Noha a csatlakozóvezeték kisfeszültségű, biztonsági okokból óvatosan kell vele bánni.
- Csak a ZAZU-termékhez mellékelt USB-kábellel használható.
- Az USB kábel nem játék.
- Figyelmeztetés: a hosszú kábel miatt fulladásveszély állhat fenn!
- Ne tedd a plüssöt túl közel a babához, és a tépőzárral rögzítsd a kiságyhoz!
- Ez a fényforrás nem melegszik.
- A plüss kézzel mosható és levegőn szárítható, de előtte vedd ki a modult!
- A modul tisztításához használj nedves ruhát, ne merítse vízbe!
- Ne szedje szét a készüléket, amennyiben az nem működne. Keresse fel ügyfélszolgálatunkat.
- Az EK-megfelelőségi nyilatkozat az alábbi címen kérhető: info@zazu-kids.com